

## **TECHNICAL DATA**

## Futura®

## DOUBLE ROBE HOOK

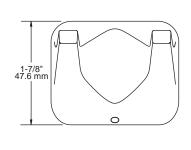

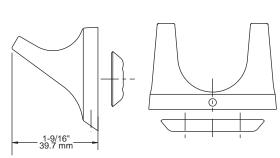



MATERIALS: Post - Zinc Die Cast

Wall Plate - Steel, Nickel Plated

INSTALLATION: Mount wall plate bracket(s) per installation instructions with supplied

fasteners. Slip product over wall plate(s) and tighten set screws until secure.

## OPTIONAL FASTENER INFORMATION:

Wood blocking is preferable behind all wall surfaces. If wood blocking is not available, the following fasteners are suggested: Tile/Masonry - Plastic or

Lead Anchors, Plaster/Drywall - Toggle Bolts

SPECIFICATION: Surface mounted double robe hook shall be model

(fill in model number) by Liberty Hardware Manufacturing Corporation.