
TECHNICAL DATA

Futura®

RECESSED TOILET PAPER HOLDER

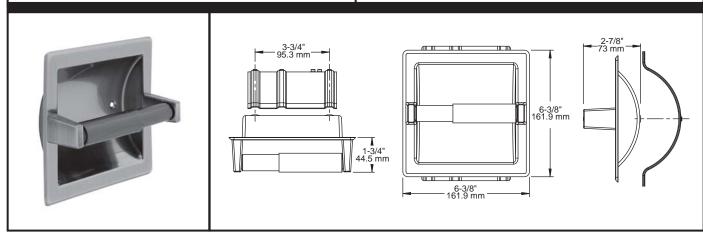

MATERIALS: Recessed Shell - Stamping Brass

Posts - Zinc Die Cast Roller - Plastic

Wall Plate - Steel, Nickel Plated

INSTALLATION: Cut a square hole 5-1/4" x 5-1/4". If wood blocking available, use included fasteners.

If wood blocking is not available, use provided 600R wall clamp.

OPTIONAL FASTENER INFORMATION:

Wood blocking is preferable behind all wall surfaces. If wood blocking is not available, the following fasteners are suggested: Tile/Masonry - Plastic or Lead Anchors, Plaster/Drywall - Toggle Bolts.

SPECIFICATION: Recessed toilet paper holder shall be model.

(fill in model number) by Liberty Hardware Manufacturing Corporation.