

KINLA™ COLLECTION

TOWEL BAR

18" Polished Chrome	KIN18-PC1
18" Satin Nickel	KIN18-SN1
18" Oil Rubbed Bronze	KIN18-OB1
24" Polished Chrome	KIN24-PC1
24" Satin Nickel	KIN24-SN1
24" Oil Rubbed Bronze	KIN24-OB1



KIN18-PC-1
Kinla™ 18" Towel Bar

KIN24-PC-1
Kinla™ 24" Towel Bar

TOILET PAPER HOLDER

Polished Chrome	KIN62-PC-1
Satin Nickel	KIN62-SN-1
Oil Rubbed Bronze	KIN62-ORB-1



KIN46-PC-1
Kinla™ Towel Ring



KIN35-PC-1
Kinla™ Hook



KIN62-PC-1
Kinla™ Toilet Paper Holder

TOWEL RING

Polished Chrome	KIN46-PC-1
Satin Nickel	KIN46-SN-1
Oil Rubbed Bronze	KIN46-ORB-1

ROBE HOOK

Polished Chrome	KIN35-PC-1
Satin Nickel	KIN35-SN-1
Oil Rubbed Bronze	KIN35-ORB-1

TOILET PAPER ROLLERS ONLY

Polished Chrome	KIN62-PC
Satin Nickel	KIN62-SN
Oil Rubbed Bronze	KIN62-ORB



KIN62-PC
Kinla™ Toilet Paper Roller Only

Available Finishes



Satin Nickel



Polished
Chrome (shown)



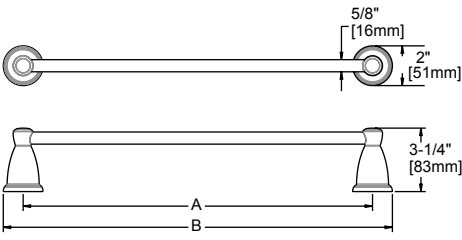
Oil Rubbed
Bronze

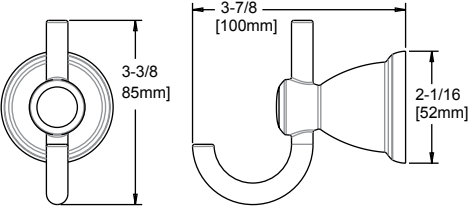
FranklinBrass®
A Liberty Hardware Brand

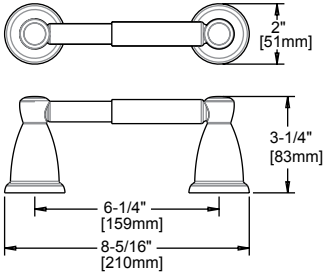
For product information reference our Trade catalog online: **FOR PROFESSIONALS**

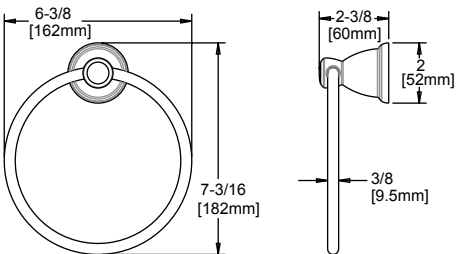
For accounts or product inquiry, email: support@libertyhardware.com

To place orders (existing account holders) email: LHorders@libertyhardware.com

<h2>18" & 24" TOWEL BARS</h2>	MATERIALS: Posts - Zinc Die Cast Bars - Aluminum Tubing Wall Plate - Zinc and Steel
	INSTALLATION: Mount wall plate bracket(s) per installation instructions with supplied fasteners. Slip product over bottom edge of wall plate(s), push up on post(s) until secure. Insert stabilizing nail into drywall to help secure clip, (DO NOT use on tile.)
	OPTIONAL FASTENER INFORMATION: Wood blocking is preferable behind all wall surfaces. If wood blocking is not available, use the supplied Hollow Wall Anchors.
	PRODUCT DIMENSIONS: Reference drawing at left: 18" Bar: Dim "A" 18" [457mm]; Dim "B" 20" [508mm] 24" Bar: Dim "A" 24" [609mm]; Dim "B" 26" [660mm]

<h2>SINGLE ROBE HOOK</h2>	MATERIALS: Post - Zinc Die Cast Wall Plate - Zinc and Steel
	INSTALLATION: Mount wall plate bracket(s) per installation instructions with supplied fasteners. Slip product over bottom edge of wall plate(s), push up on post(s) until secure. Insert stabilizing nail into drywall to help secure clip, (DO NOT use on tile.)
	OPTIONAL FASTENER INFORMATION: Wood blocking is preferable behind all wall surfaces. If wood blocking is not available, use the supplied Hollow Wall Anchors.
	PRODUCT DIMENSIONS: See drawing at left for details.

<h2>TOILET PAPER HOLDER</h2>	MATERIALS: Posts - Zinc Die Cast Roller - Plastic Wall Plate - Zinc and Steel
	INSTALLATION: Mount wall plate bracket(s) per installation instructions with supplied fasteners. Slip product over bottom edge of wall plate(s), push up on post(s) until secure. Insert stabilizing nail into drywall to help secure clip, (DO NOT use on tile.)
	OPTIONAL FASTENER INFORMATION: Wood blocking is preferable behind all wall surfaces. If wood blocking is not available, use the supplied Hollow Wall Anchors.
	PRODUCT DIMENSIONS: See drawing at left for details.

<h2>TOWEL RING</h2>	MATERIALS: Post - Zinc Die Cast Ring - Aluminum Tubing Wall Plate - Zinc and Steel
	INSTALLATION: Mount wall plate bracket(s) per installation instructions with supplied fasteners. Slip product over bottom edge of wall plate(s), push up on post(s) until secure. Insert stabilizing nail into drywall to help secure clip, (DO NOT use on tile.)
	OPTIONAL FASTENER INFORMATION: Wood blocking is preferable behind all wall surfaces. If wood blocking is not available, use the supplied Hollow Wall Anchors.
	PRODUCT DIMENSIONS: See drawing at left for details.