



LYNWOOD™ COLLECTION

TOWEL BAR

18" Venetian Bronze®	11018VBR
18" Satin Nickel	11018SN
18" Polished Chrome	11018PC
24" Venetian Bronze®	11024VBR
24" Satin Nickel	11024SN
24" Polished Chrome	11024PC



11018VBR Lynwood™ 18" Towel Bar | 11024VBR Lynwood™ 24" Towel Bar

TOILET PAPER HOLDER

Venetian Bronze®	11008VBR
Satin Nickel	11008SN
Polished Chrome	11008PC



11016VBR Lynwood™ Towel Ring



11002VBR Lynwood™ Hook

TOWEL RING

Venetian Bronze®	11016VBR
Satin Nickel	11016SN
Polished Chrome	11016PC



11008VBR Lynwood™ Toilet Paper Holder

ROBE HOOK

Venetian Bronze®	11002VBR
Satin Nickel	11002SN
Polished Chrome	11002PC

Available Finishes



Polished Chrome



Satin Nickel



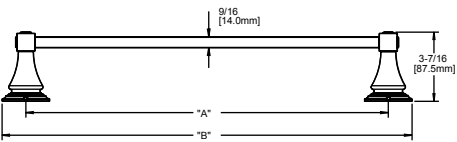

Venetian Bronze®

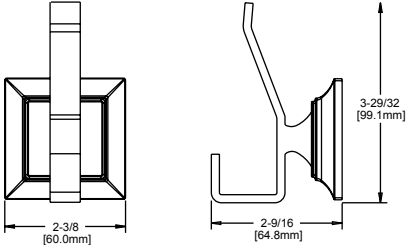

FranklinBrass®
A Liberty Hardware Brand

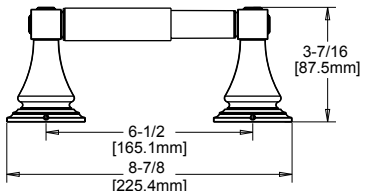

For product information reference our Trade catalog online: **FOR PROFESSIONALS**

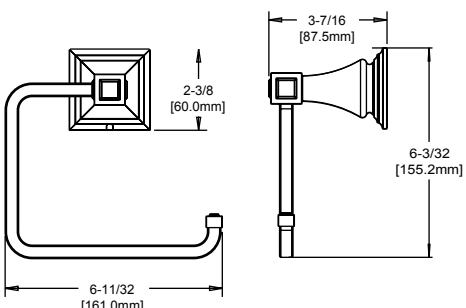
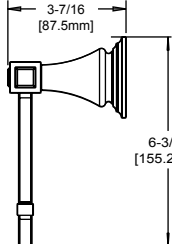
For accounts or product inquiry, email: support@libertyhardware.com

To place orders (existing account holders) email: LHorders@libertyhardware.com

<h2>18" & 24" TOWEL BARS</h2>	MATERIALS: Posts - Zinc Die Cast Bars - Steel Wall Plate - Steel, Zinc Plated
	INSTALLATION: Mount wall plate bracket(s) per installation instructions with supplied fasteners. Slip product over wall plate(s) and tighten set screws until secure.
	OPTIONAL FASTENER INFORMATION: Wood blocking is preferable behind all wall surfaces. If wood blocking is not available, the following fasteners are suggested: Tile/Masonry - Plastic or Lead Anchors, Plaster/Drywall - Toggle Bolts.
PRODUCT DIMENSIONS:	Reference drawing at left: 18" Bar: Dim "A" 18" [457mm]; Dim "B" 20" [517mm] 24" Bar: Dim "A" 24" [610mm]; Dim "B" 26" [670mm]

<h2>SINGLE ROBE HOOK</h2>	MATERIALS: Posts - Zinc Die Cast Bars - Steel Wall Plate - Steel, Zinc Plated
	INSTALLATION: Mount wall plate bracket(s) per installation instructions with supplied fasteners. Slip product over wall plate(s) and tighten set screws until secure.
	OPTIONAL FASTENER INFORMATION: Wood blocking is preferable behind all wall surfaces. If wood blocking is not available, the following fasteners are suggested: Tile/Masonry - Plastic or Lead Anchors, Plaster/Drywall - Toggle Bolts.
PRODUCT DIMENSIONS:	See drawing at left for details.

<h2>TOILET PAPER HOLDER</h2>	MATERIALS: Posts - Zinc Die Cast Bars - Steel Wall Plate - Steel, Zinc Plated
	INSTALLATION: Mount wall plate bracket(s) per installation instructions with supplied fasteners. Slip product over wall plate(s) and tighten set screws until secure.
	OPTIONAL FASTENER INFORMATION: Wood blocking is preferable behind all wall surfaces. If wood blocking is not available, the following fasteners are suggested: Tile/Masonry - Plastic or Lead Anchors, Plaster/Drywall - Toggle Bolts.
PRODUCT DIMENSIONS:	See drawing at left for details.

<h2>TOWEL RING</h2>	MATERIALS: Posts - Zinc Die Cast Bars - Steel Wall Plate - Steel, Zinc Plated
	INSTALLATION: Mount wall plate bracket(s) per installation instructions with supplied fasteners. Slip product over wall plate(s) and tighten set screws until secure.
	OPTIONAL FASTENER INFORMATION: Wood blocking is preferable behind all wall surfaces. If wood blocking is not available, the following fasteners are suggested: Tile/Masonry - Plastic or Lead Anchors, Plaster/Drywall - Toggle Bolts.
PRODUCT DIMENSIONS:	See drawing at left for details.