



CENTURA™ COLLECTION

TOWEL BAR ONLY

- 18" Polished Chrome E8500A-18
- 24" Polished Chrome E8500A-24
- 30" Polished Chrome E8500A-30



E8500A-18
Centura™ 18" Towel Bar

E8500A-24
Centura™ 24" Towel Bar

**CENTURA ONE PAIR
TOWEL BAR POST**

- Polished Chrome E8500A-18

TOILET PAPER HOLDER

- Polished Chrome D8508B

TOWEL RING

- Polished Chrome D8517

ROBE HOOK

- Polished Chrome D8501



D8517
Centura™ Towel Ring



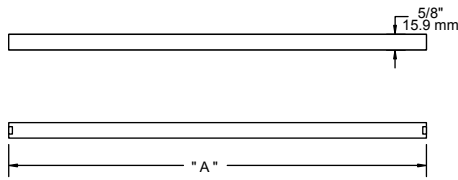
D8501
Centura™ Hook

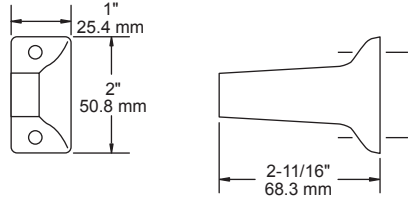


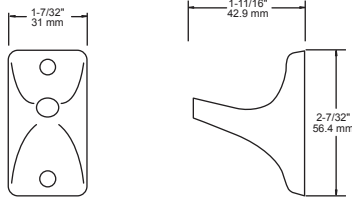
D8508B
Centura™ Toilet Paper Holder

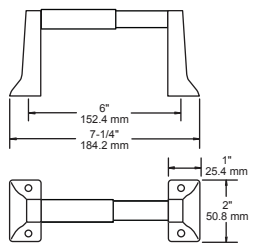
Best Value®
Bathware

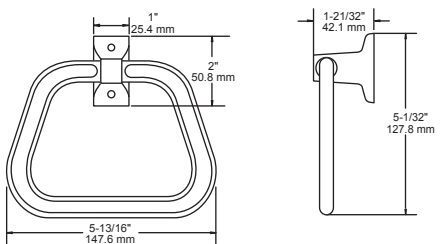
For order placement send email to: distributorsupport@libertyhardware.com; for product questions call 866-264-1964 or product search visit www.libertyhardware.com

<h2 style="text-align: center;">18" TOWEL BARS</h2>	MATERIALS: Posts - Zinc Die Cast Bars - Steel Wall Plate - Steel, Zinc Plated	
	INSTALLATION: Mount wall plate bracket(s) per installation instructions with supplied fasteners. Slip product over wall plate(s) and tighten set screws until secure.	Mount wall plate bracket(s) per installation instructions with supplied fasteners. Slip product over wall plate(s) and tighten set screws until secure.
	OPTIONAL FASTENER INFORMATION: Wood blocking is preferable behind all wall surfaces. If wood blocking is not available, the following fasteners are suggested: Tile/Masonry - Plastic or Lead Anchors, Plaster/Drywall - Toggle Bolts.	Wood blocking is preferable behind all wall surfaces. If wood blocking is not available, the following fasteners are suggested: Tile/Masonry - Plastic or Lead Anchors, Plaster/Drywall - Toggle Bolts.
	PRODUCT DIMENSIONS: Reference drawing at left: 18" Bar: Dim "A" 18" [457mm]; 24" Bar: Dim "A" 24" [610mm];	Reference drawing at left: 18" Bar: Dim "A" 18" [457mm]; 24" Bar: Dim "A" 24" [610mm];

<h2 style="text-align: center;">TOWEL BAR POST</h2>	MATERIALS: Posts - Zinc Die Cast Bars - Steel Wall Plate - Steel, Zinc Plated	
	INSTALLATION: Mount wall plate bracket(s) per installation instructions with supplied fasteners. Slip product over wall plate(s) and tighten set screws until secure.	Mount wall plate bracket(s) per installation instructions with supplied fasteners. Slip product over wall plate(s) and tighten set screws until secure.
	OPTIONAL FASTENER INFORMATION: Wood blocking is preferable behind all wall surfaces. If wood blocking is not available, the following fasteners are suggested: Tile/Masonry - Plastic or Lead Anchors, Plaster/Drywall - Toggle Bolts.	Wood blocking is preferable behind all wall surfaces. If wood blocking is not available, the following fasteners are suggested: Tile/Masonry - Plastic or Lead Anchors, Plaster/Drywall - Toggle Bolts.
	PRODUCT DIMENSIONS: See drawing at left for details.	See drawing at left for details.

<h2 style="text-align: center;">SINGLE ROBE HOOK</h2>	MATERIALS: Posts - Zinc Die Cast Bars - Steel Wall Plate - Steel, Zinc Plated	
	INSTALLATION: Mount wall plate bracket(s) per installation instructions with supplied fasteners. Slip product over wall plate(s) and tighten set screws until secure.	Mount wall plate bracket(s) per installation instructions with supplied fasteners. Slip product over wall plate(s) and tighten set screws until secure.
	OPTIONAL FASTENER INFORMATION: Wood blocking is preferable behind all wall surfaces. If wood blocking is not available, the following fasteners are suggested: Tile/Masonry - Plastic or Lead Anchors, Plaster/Drywall - Toggle Bolts.	Wood blocking is preferable behind all wall surfaces. If wood blocking is not available, the following fasteners are suggested: Tile/Masonry - Plastic or Lead Anchors, Plaster/Drywall - Toggle Bolts.
	PRODUCT DIMENSIONS: See drawing at left for details.	See drawing at left for details.

<h2 style="text-align: center;">TOILET PAPER HOLDER</h2>	MATERIALS: Posts - Zinc Die Cast Bars - Steel Wall Plate - Steel, Zinc Plated	
	INSTALLATION: Mount wall plate bracket(s) per installation instructions with supplied fasteners. Slip product over wall plate(s) and tighten set screws until secure.	Mount wall plate bracket(s) per installation instructions with supplied fasteners. Slip product over wall plate(s) and tighten set screws until secure.
	OPTIONAL FASTENER INFORMATION: Wood blocking is preferable behind all wall surfaces. If wood blocking is not available, the following fasteners are suggested: Tile/Masonry - Plastic or Lead Anchors, Plaster/Drywall - Toggle Bolts.	Wood blocking is preferable behind all wall surfaces. If wood blocking is not available, the following fasteners are suggested: Tile/Masonry - Plastic or Lead Anchors, Plaster/Drywall - Toggle Bolts.
	PRODUCT DIMENSIONS: See drawing at left for details.	See drawing at left for details.

<h2 style="text-align: center;">TOWEL RING</h2>	MATERIALS: Posts - Zinc Die Cast Bars - Steel Wall Plate - Steel, Zinc Plated	
	INSTALLATION: Mount wall plate bracket(s) per installation instructions with supplied fasteners. Slip product over wall plate(s) and tighten set screws until secure.	Mount wall plate bracket(s) per installation instructions with supplied fasteners. Slip product over wall plate(s) and tighten set screws until secure.
	OPTIONAL FASTENER INFORMATION: Wood blocking is preferable behind all wall surfaces. If wood blocking is not available, the following fasteners are suggested: Tile/Masonry - Plastic or Lead Anchors, Plaster/Drywall - Toggle Bolts.	Wood blocking is preferable behind all wall surfaces. If wood blocking is not available, the following fasteners are suggested: Tile/Masonry - Plastic or Lead Anchors, Plaster/Drywall - Toggle Bolts.
	PRODUCT DIMENSIONS: See drawing at left for details.	See drawing at left for details.